


No.	Description	Part Code	Qty	No.	Description	Part Code	Qty	No.	Description	Part Code	Qty
M1	LUBRICANT BOTTLE ASSEMBLY	095-0031	1	61	MAIN HOUSING	095-0146	1	 evolutionpowertools.com			
1	CIRCLIP 32MM	F-CCEXT-30-119-ST-PO	1	62	MOTOR SWITCH	095-0147	1				
2	CLAMPING SLEEVE	095-0101	1	63	LEAF SPRING	095-0148	1				
3	PIN 3X12MM	095-0102	1	64	DEPTH RULE	095-0149	1				
4	SCREW M8X8	F-SSCCP-M8-8-ST-BO	2	65	CRANK HANDLE	095-0150	3				
5	MAIN DRIVE SHAFT	095-0103	1	66	CRANK AXLE	095-0151	1				
6	FLAT KEY	095-0104	1	67	SPRING WASHER 4MM	F-SWA-M4-ST-BO	7				
8	CIRCLIP 47MM	F-CCINT-47-125-ST-PO	1	68	PRESSURE BAR	095-0152	1				
9	BEARING	F-B-6005-2RSR	1	69	GUIDE BAR	095-0153	2				
10	CLAMPING PIECE	095-0105	1	70	SCREW M4X20	F-SHCS-M4-20-ST-BO	6				
11	PIN	095-0106	3	71	RACK	095-0154	1				
12	FINGER	095-0107	1	72	DRILL SLIDE	095-0155	1				
13	CLAMPING LEVER	095-0108	1	73	HALF-ROUND HEAD SCREW M5*8	095-0210	2				
14	SPECIAL LOCK SCREW(LH)	095-0109	1	74	SCREW M5X16	F-SHCS-M5-16-ST-BO	2				
15	SCREW M4X10	F-SPHPZ-M4-10-BO	11	75	GUARD	095-0156	1				
16	GEAR BOX HOUSING	095-0110	1	76A	MAGNETIC BASE 230V	095-0158	1				
17	CIRCLIP 25MM	F-CCEXT-25-118-ST-BO	1	77	SCREW M5X40	F-SHCS-M5-40-ST-BO	4				
18	FINAL DRIVE GEAR	095-0111	1	78A	PCB 230V	095-0162	1				
19	BEARING 627Z	F-B-627-2Z	1	79	SIDE COVER	095-0165	1				
20	PRIMARY GEAR SHAFT	095-0112	1	80B	POWER CORD 230V EU	095-0168	1				
21	PRIMARY GEAR	095-0113	1	81	SCREW	F-SSCFP-M4-8-ST-BO	3				
22	BEARING 607ZZ	F-B-607-2Z	1	82	WING SCREW &WASHER	095-0170	2				
23	SEAL	095-0114	1	83	CORD SHEATH	095-0174	1				
24	SPINDLE BUSH	095-0115	1	84	CONNECTING CORD	095-0172	1				
25	CIRCLIP 20MM	F-CCEXT-20-105-ST-BO	1	85	HAMMER RIVET	095-0173	2				
26	SCREW M5X25	F-SPHPZ-M5-25-BO	4	86	CIRCLIP 19MM	F-CCINT-20-110-ST-BO	1				
27	SPRING WASHER 5MM	F-SWA-M5-ST-BO	16	87	WASHER	F-W-M8-ST-BO	1				
28	FLAT WASHER 5MM	F-WB-M5-ST-BO	4	88	COOLANT SEAL	095-0174	1				
29	COOLANT NOZZLE	095-0116	1	89	SPRING	095-0175	1				
30	TAPPING SCREW	F-TFPX-8-25-ST-BO	4	90	4MM HEX KEY	095-0179	1				
31	GEAR BOX COVER	095-0117	1	91	4MM HEX KEY	095-0178	1				
32	PIN 4X16	095-0118	3	92	3MM HEX KEY	095-0177	1				
33	O-RING 26X2	095-0119	1	93	SAFTY STRAP	095-0180	1				
34	BEARING6000RS	F-B-6000-2RSR	1	94	2.5MM HEX KEY	095-0176	1				
35A	ARMATURE 230V UK	095-0121	2	95	FUSE HOLDER	095-0181	1				
36	BEARING 607ZZ	F-B-607-2Z	1	96A	FUSE 10AMP 230V	095-0184	1				
37	BEARING SLEEVE	095-0124	1	97A	LABEL SET 230V UK	095-0187	1				
38	INSULATOR RING	095-0125	1	98	CABLE PLATE	095-0193	2				
39	RING MAGNET	095-0126	1	99	TAPPING SCREW	F-TFPX-8-30-ST-BO	2				
40	AIR DEFLECTOR	095-0127	1	100	TAPPING SCREW	F-TFPX-8-16-ST-BO	4				
41	TAPPING SCREW 4.2X70	F-TFPX-8-70-ST-BO	2	101	REAR COVER	095-0194	1				
42A	FIELD ASSY 230V UK	095-0129	2	102	SHOULDER SCREW	095-0195	1				
43	MOTOR HOUSING	095-0132	1	103	CABLE PLATE	095-0196	1				
44	SPRING	095-0133	2	104	LOCKING WASHER 4MM	095-0197	1				
45	BRUSH HOLDER	095-0134	2	105	SIGNAL WIRES	095-0198	1				
46	CARBON BRUSH (PR)	095-0135	2	106	SCREW M4X14	F-SPHPZ-M4-14-ST-BO	2				
47	TAPPING SCREW 2.9X9.5	F-TFPX-4-9.5-ST-BO	6								
48	SENSOR BASE	095-0136	1								
49	CABLE CONECTOR	095-0137	4								
50	SENSOR	095-0138	1								
51	BACK COVER	095-0139	1								
53	CABLE CONNECTOR	095-0140	2								
54	CABLE PROTECTOR	095-0141	1								
55	MAGNETIC SWITCH	095-0142	1								
56	SWITCH PLATE	095-0143	1								
57	SCREW M6X16	F-SHCS-M6-16-ST-BO	1								
58	SPRING WASHER 6MM	F-SWA-M6-ST-BO	1								
59	SPECIAL WASHER 6X27X2	095-0144	1								
60	SHAFT SLEEVE	095-0145	2								

Service Parts List	V: 095-0003	230V EU
EVO42 Magnetic Drill		